



155-15 FUEL VALVE INSTRUCTIONS

MAINTENANCE PROCEDURE FOR THREE WAY FUEL VALVE

These valves utilize aluminum components which can corrode if subjected to prolonged exposure to water or fuel when stored. ***Valves which fail due to internal corrosion are not covered by warranty!*** To avoid internal corrosion of the valve's components, the valve must be periodically lubricated. Before storing your boat, remove one fitting from the valve and spray lubricant inside. Rotate the handle through the complete pattern several times to insure adequate lubrication.

Eddie Marine, 11479 6TH St, Rancho Cucamonga, CA 91730

P: 909-945-2830 F: 909-945-9293 www.eddiemarine.com