
Water Wictch #WW-247

Automatic Bilge Pump Switch 230

Specifications

Power Required: 12Vdc Power at rest: .006 Amps Maximum Load: 20 Amps.

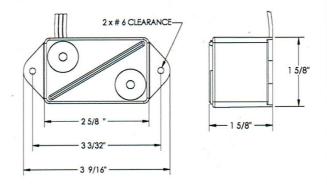

Installation Instructions WARNING

TOUCHING STRIPPED TAN WIRE TO GROUNDED METAL MAY DAMAGE UNIT. VOLTAGE LESS THAN 9 VOLTS DC CAN CAUSE ERRATIC OPERATION.

- 1. Disconnect the battery.
- 2. Select a mounting location for the Water Witch.

 The water sensor (see diagram) should be above the standing water level.

 Always keep the wire connections above the "Standing Water Line".
- 3. Connect the switch refering to the wiring diagram provided below.
- 4. From the Water Witch:

Tan to the Positive (+) side of the pump or the device being controlled. Black to Ground or the Negative (-) side of the battery. Red to the Positive (+) side of the battery.

- 5. Reconnect the battery and the pump will run for several seconds while the switch self-calibrates.
- 6. The installation is complete.

WHEN POWER IS APPLIED, THE SWITCH RUNS THE PUMP FOR SEVERAL SECONDS TO SELF-CALIBRATE.

Maintenance

The Water Witch requires little maintenance other than periodic cleaning of the sensors. Ordinarily this consists of hosing it down with fresh water and wiping it off with a clean rag or towel. Some high foaming detergents can delay or prolong cycle times. Periodically check electrical connections for corrosion.

