


# EMI FLUSH KIT

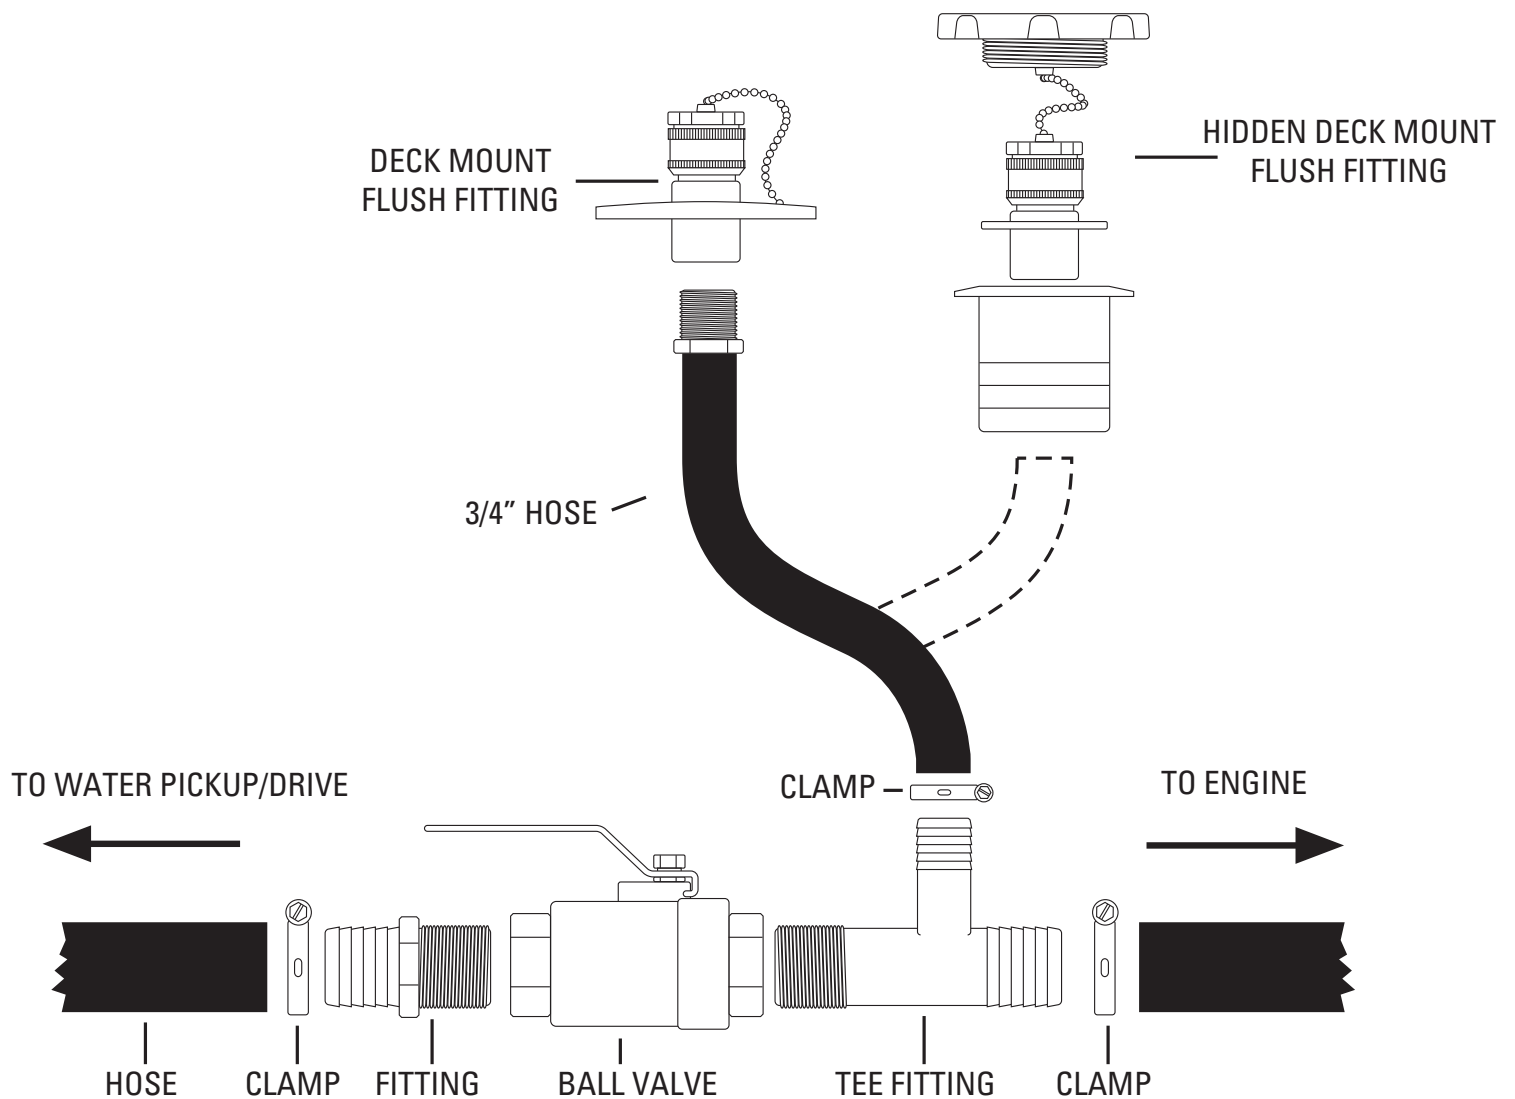

**NOTE: This flush kit is only for use with applications that use engine mounted raw water pumps. DO NOT USE WITH APPLICATIONS THAT UTILIZE A WATER PUMP IN THE OUTDRIVE!!**

- 1) With your boat out of the water, cut and splice the flush kit tee fitting assembly into the engine's main water inlet hose. Use Teflon tape or liquid pipe sealer on the threads of all fittings and tighten all hose clamps securely.
- 2) Locate a place for mounting the deck fill. Make sure that it is positioned above the boat's waterline where it cannot be submerged.
- 3) Install the fitting and hose and tighten both securely.
- 4) When not using the flush, make sure the deck fill cap is fastened securely.