


# 500-78 TRIM TABS

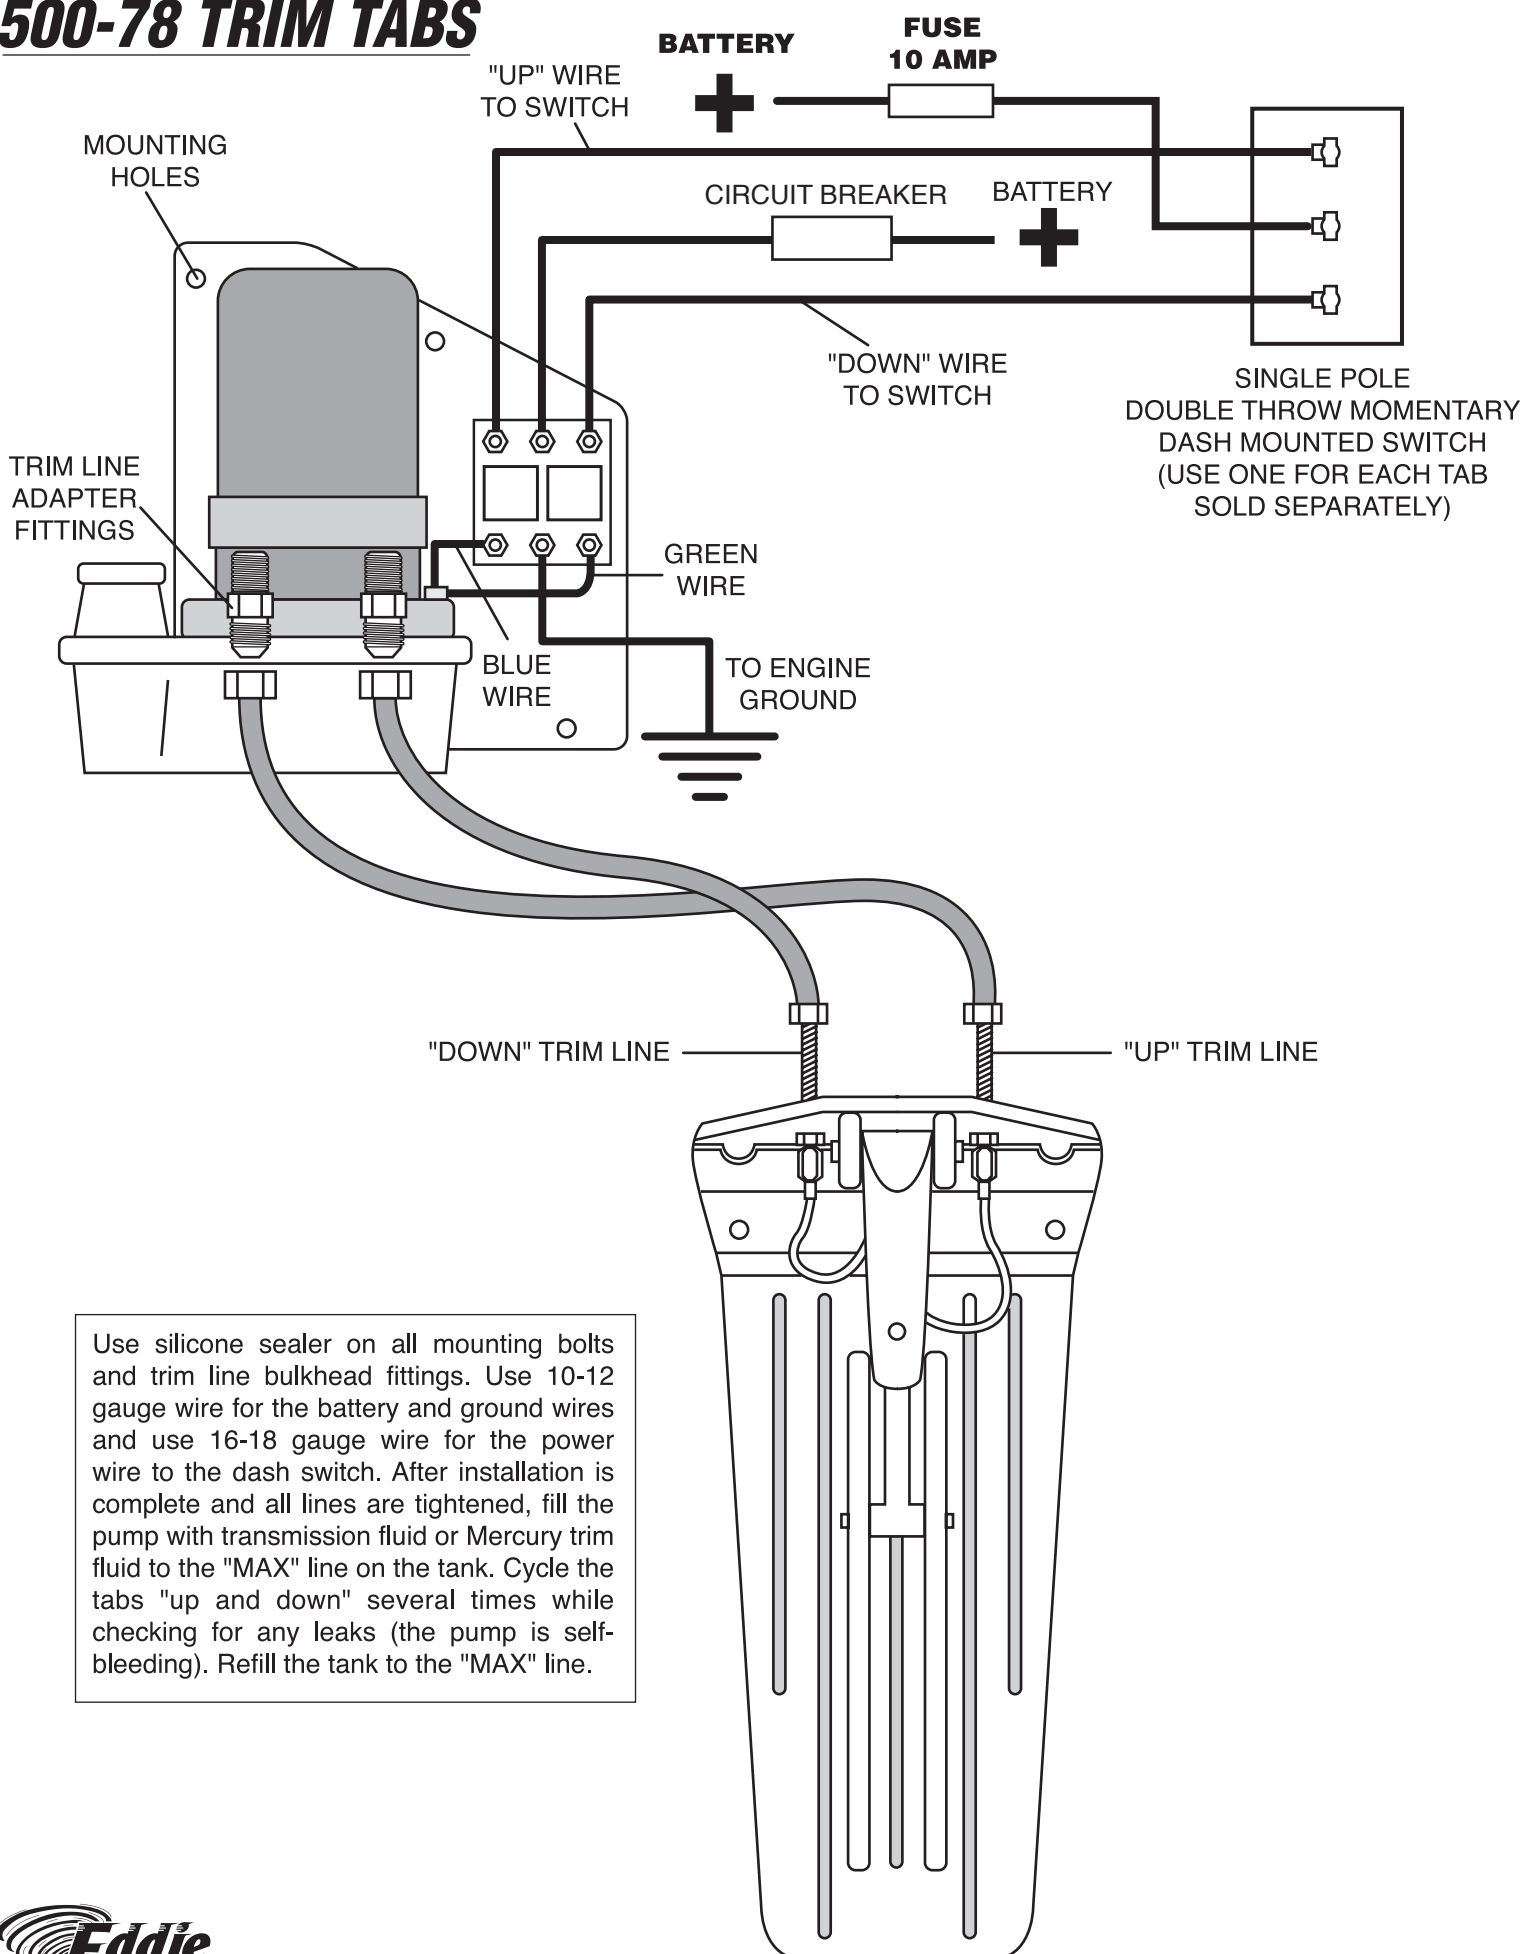

Use silicone sealer on all mounting bolts and trim line bulkhead fittings. Use 10-12 gauge wire for the battery and ground wires and use 16-18 gauge wire for the power wire to the dash switch. After installation is complete and all lines are tightened, fill the pump with transmission fluid or Mercury trim fluid to the "MAX" line on the tank. Cycle the tabs "up and down" several times while checking for any leaks (the pump is self-bleeding). Refill the tank to the "MAX" line.